



COURTESY INTERIOR DOME LIGHT

COURTESY LIGHT SWITCH ON CONSOLE

- 1) DOOR SWITCHES SHOWN IN THE "DOOR CLOSED" POSITION
- 2) DOOR HARNESS DISCONNECT
- 3) INSTRUMENT HARNESS DISCONNECT
- 4) DRIVER'S DOOR SWITCH IS THE UPPER OF TWO SWITCHES. THE LOWER SWITCH IS FOR THE KEY WARNING BUZZER.

SOBill@aol.com 12/11/01

DOOR AND INTERIOR COURTESY LIGHTS