



- 1) IGNITION SWITCH HARNESS-TO-MAIN HARNESS JUNCTION BLOCK
- 2) FACTORY SCHEMATIC SHOWS THE RESISTOR IN TWO SECTIONS. A SINGLE RESISTOR MAY BE INSTALLED AT POSITIVE SIDE OF THE COIL.
- 3) LOACTED ON ENGINE COMPARTMENT FIREWALL ON THE PASSENGER SIDE

SOBill@aol.com 28 FEB. '02

ENGINE RUN (EARLY)