



- 1) THE COMBINATION OF THIS RESISTOR AND THE FILAMENT OF THE BATTERY DISCHARGE INDICATOR LAMP SUPPLY FIELD POWER TO THE ALTERNATOR. THE RESISTOR WILL SUPPORT THIS FUNCTION IF THE LAMP IS BURNED OUT OR REMOVED.