TURN SIGNALS/ HAZARD WARNINGS (LATE)

SAE-QC72-DKS-E

SOBill@aol.com 3/29/2010

BATTERY
+
−

AMMETER
A

FUSE # 8
15 A

R
BK P
P V G
30

FUSE #12
25 A

IGNITION
IN 'RUN'

R
R
R
15

FROM CONTROLS LIGHTING
POWER VIA LIGHTING DIMMER

HAZARD WARNING
SWITCH VIEWED
FROM PINS
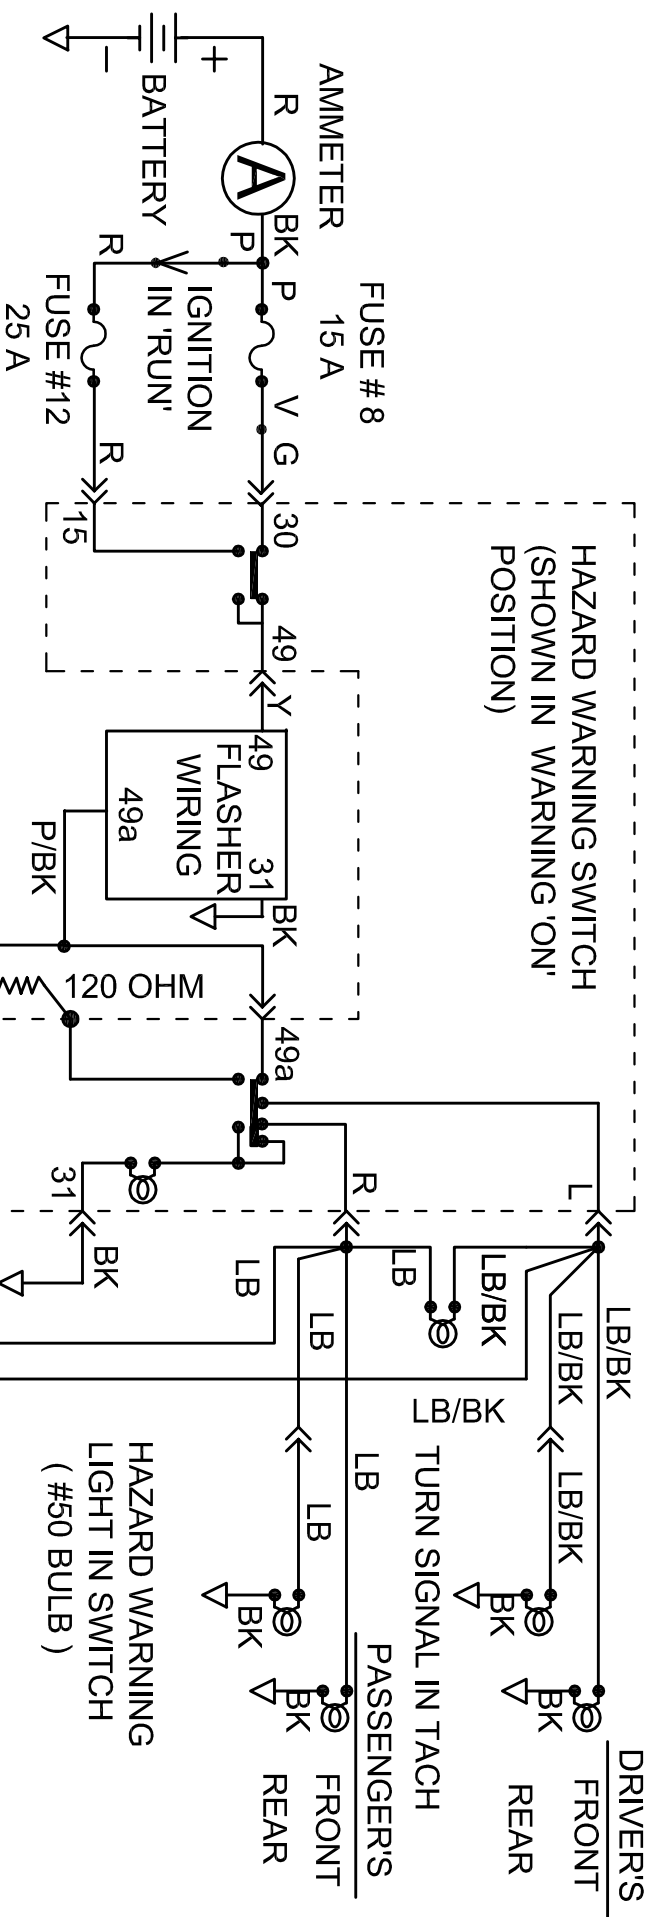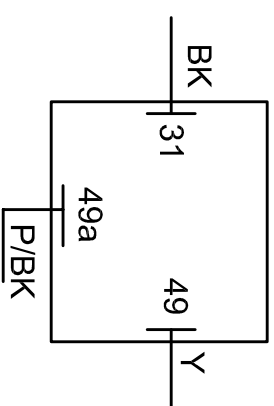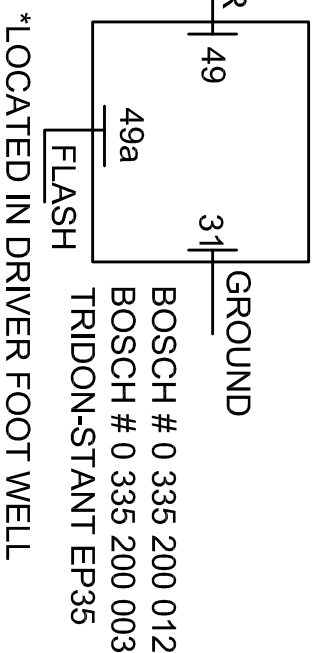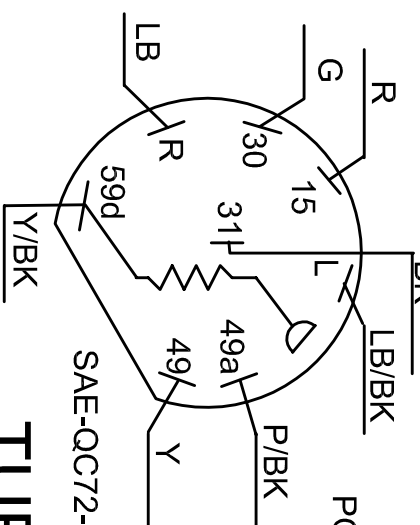
HAZARD WARNING SWITCH
(SHOWN IN WARNING 'ON'
POSITION)

LB
G
R
R
30
15
59d
31
49a
49
Y
P/BK
LB/BK
BK
L
Y/BK

49
Y

49
49a
31
BK
FLASHER
WIRING

P/BK

120 OHM

59d

49a

31

R

L

LB

LB/BK

LB/BK

LB

Y/BK

P/BK

LB/BK

LB

BK

FLASHER UNIT
VIEWED FROM PINS*

POWER
49
49a
FLASH
31
GROUND

BOSCH # 0 335 200 012
BOSCH # 0 335 200 003
TRIDON-STANT EP35

*LOCATED IN DRIVER FOOT WELL

TURN SIGNAL SWITCH
FLASHER SOCKET
VIEWED WITH FLASHER
UNIT REMOVED

BK
31
49a
P/BK
49
Y

HAZARD WARNING
LIGHT IN SWITCH
(#50 BULB)

TURN SIGNAL IN TACH

TURN SIGNALS

DRIVER'S
FRONT
REAR
BK
BK

PASSENGER'S
FRONT
REAR
BK
BK

LB
LB
LB/BK
LB/BK